

Instructions

Assembly
Installation
Operation

7/2007


Petoskey Picnic Table & Benches

Product Assembly:

No assembly required.

Embedding Supports:

1. Recommended spacing is 14" from outside edge of table to outside edge of bench.
2. Recommended table height is 30".
3. Recommended bench height is 18".
4. Place supports in location. Mark area for hole location. Allow 12" depth for embedding table and 14" depth for embedding bench.
5. If embedding into soil, we recommend the excavated area to be 12" square by 20" deep. Fill with concrete.
6. When embedding through a concrete pad, use no less than a 4" diameter core through the pad and excavate 12" deep for table, 14" deep for bench. Fill with concrete.

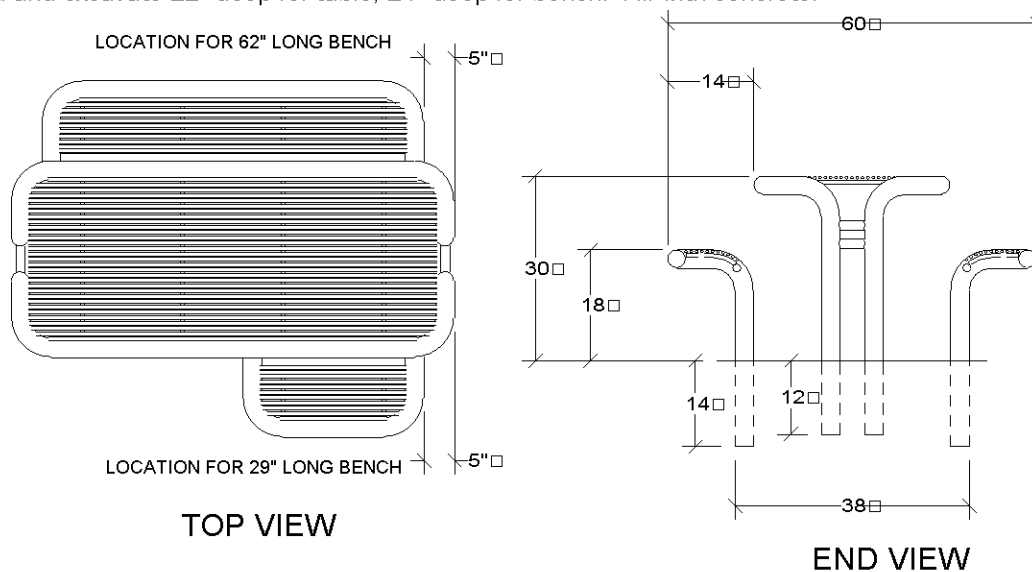

ASSEMBLE WITH CARE! Pangard II® Polyester Powdercoat is a strong, long-lasting finish. To protect this finish during assembly, place unwrapped powdercoated parts on packaging foam or other non-marring surface. Do not place or slide powdercoated parts on cement or other hard or textured surface - this will damage the finish causing rust to occur. Use touch-up paint on any gouges in the finish caused by assembly tools.