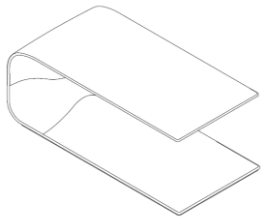

Table

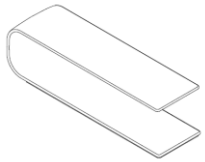

Bench

Included components: (2) M12 x 140mm stud bolts for anchoring

Tools required:
- Crane or forklift to move 3880 lbs.
- Wood supports or straps
- Ø40mm masonry drill
- Chemical anchoring adhesive (Hilti HIT RE 500 or equivalent)
- Compressed air and wire brush

INSTALLATION:

1. Determine placement of unit.
2. Thread anchors into base of unit.
3. Drill Ø40mm holes in concrete slab. Drill to 180mm depth.
4. Clear holes of debris using wire brush and compressed air.
5. Fill holes with epoxy according to manufacturer's recommendations.
6. Slowly set unit in position.
7. Wipe away excess epoxy before it cures.

NOTE: Items will deliver on pallets in closed freight containers. Appropriate equipment will be required to offload from a closed container.
Flatbed delivery is possible upon request and for an additional charge.
Strapping is indicated as a method of placing the item on the project site.

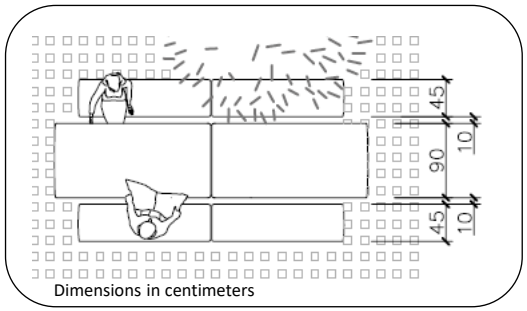

Fig. 1 – Table/bench spacing

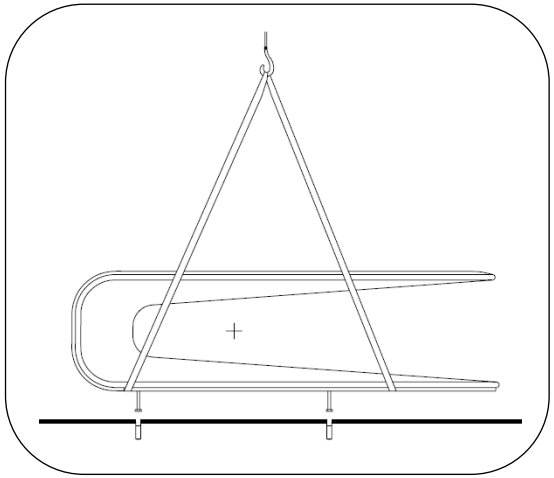

Fig. 2 – Crane install – strap locations

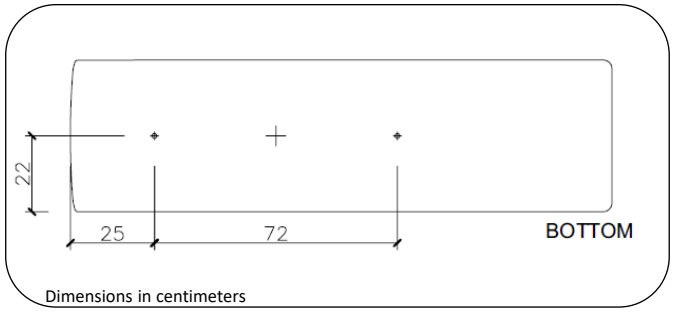

Fig. 3 – backless bench hole locations

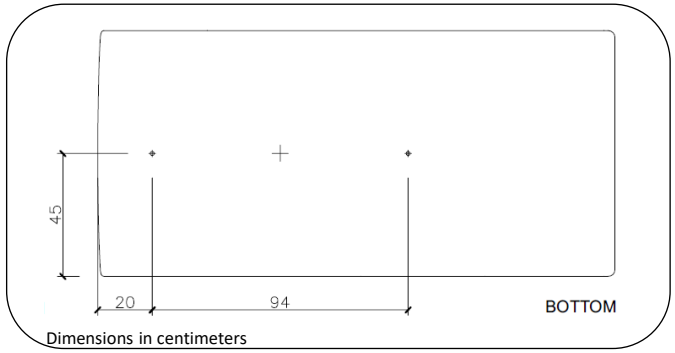

Fig. 4 – table hole locations

landscapeforms®